 


# Daily Cleaning for the Single Batch Oven

## Daily Cleaning

Follow the steps below when cleaning your Single Batch oven. Use only TurboChef®-approved cleaning chemicals. The use of any other cleaning products may damage critical oven components, resulting in a non-warranty service call.

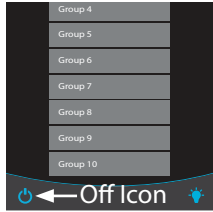

Step 1

### Step 1: Prepare the Oven

⚠ **WARNING:** The oven operates at temperatures up to 550°F (285°C) and may cause injury if not allowed to cool properly.

- Turn the oven off by touching the Off icon.
- Open the oven doors.
- ⊘ **DO NOT** attempt to clean the oven until the oven display no longer reads COOLING DOWN.

**NOTE:** To expedite cooking, leave the oven door open and insert a tray of ice into the cavity.

 


Step 2

### Step 2: Remove and Clean the Wire Rack

⚠ **WARNING:** Be sure the oven interior is cool before you remove the rack.

- Remove the wire rack.
- Wash, rinse, and sanitize the wire rack.

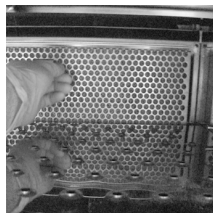

Step 3

### Step 3: Remove and Clean the Grease Filter

- Remove the grease filter from the oven. To remove, lift the grease filter by the handle and pull forward.
- Wash and gently rinse the grease filter with hot water.

⚠ **WARNING:** DO NOT scrub the grease filter or use a water jet when cleaning.



Step 4

### Step 4: Clean the Cook Chamber

- Use a food vacuum or damp towel to remove food particles from the cook chamber.
- Spray Oven Cleaner onto the top, bottom, and sides of the cook chamber.

⚠ **CAUTION:** DO NOT spray Oven Cleaner into the holes on the back oven wall or directly into the cook chamber lamps. Doing so can damage critical oven components, resulting in a non-warranty service call.

- For stubborn stains, spray Oven Cleaner and allow it to penetrate for 5 minutes.
- Clean the cook chamber with a nylon scrub pad.
- Wipe the cook chamber with a clean, damp towel and then a dry towel.



Step 5 (Fig A)

### Step 5: Clean the Oven Doors

- Clean the metal portion of the oven door with Oven Cleaner and a nylon scrub pad.
- Gently clean the glass window with Oven Cleaner and a cleaning towel.
- ⚠ **CAUTION:** DO NOT use abrasive cleaning supplies (e.g. steel wool) when cleaning the glass window. Doing so may scratch the window.

⚠ **CAUTION:** DO NOT apply excessive force when cleaning the glass window. Breakage may result in a non-warranty service call.

## Supplies and Equipment

TurboChef® Oven Cleaner (Product Number: 103180), TurboChef® Oven Guard (Product Number: 103181), nylon scrub pad, cleaning towel, disposable gloves, protective eyewear, dust mask (optional)



Step 5 (Fig B)

### Step 5: Clean the Oven Door, Continued

- Wipe the oven door and window with a clean, damp towel and then a dry towel.

⚠ **CAUTION:** DO NOT scrub or attempt to clean the oven door gasket (Fig B).



Step 6

### Step 6: Apply Oven Guard

- Spray Oven Guard onto a clean towel.
- Wipe the interior walls and the inside of the oven door.

 
⚠ **CAUTION:** DO NOT spray Oven Guard into the holes on the back oven wall or directly into the cook chamber lamps. Doing so can damage critical oven components, resulting in a non-warranty service call.



Step 7

### Step 7: Reinstall the Grease Filter and Wire Rack

- Reinstall the grease filter.
- Reinstall the wire rack. There are notches on the right and left sides of the wire rack which fit over the pins on the sides of the cook chamber. The wire rack must be installed correctly to ensure proper oven operation.

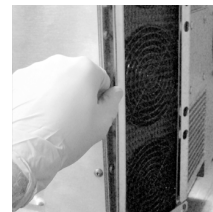


Step 8

### Step 8: Clean the Air Filter

 ⚠ **CAUTION:** TurboChef does not recognize blocked air vents as a warrantable claim. The filter must be cleaned regularly or replaced if damaged. During oven operation, the filter must remain in place at all times.

- Remove the air filter from the back of the oven.
- Rinse the air filter with hot water. DO NOT scrub the filter.
- Allow the air filter to dry completely.
- Reinstall the air filter.

⚠ **CAUTION:** DO NOT Operate the oven without the filter in place.

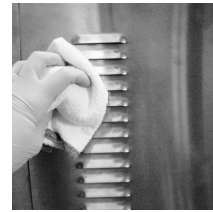

Step 9

### Step 9: Clean the Oven Exterior

- Wipe the oven exterior with a clean, damp towel.

⚠ **CAUTION:** DO NOT spray chemicals into any openings, such as the louvers on the side or rear panels. Doing so can damage critical oven components, resulting in a non-warranty service call.

- Wipe the oven exterior with a clean, dry towel.

 
# Weekly Cleaning for the Single Batch Oven

## Weekly Cleaning


Once a week (or more frequently depending on use), perform the following steps to help maintain your oven. Use only TurboChef®-approved cleaning chemicals. The use of any other cleaning products may damage critical oven components, resulting in a non-warranty service call.




Step 1

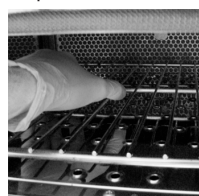

 
Step 2

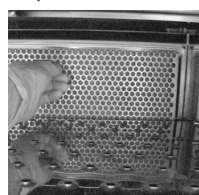

 
Step 3

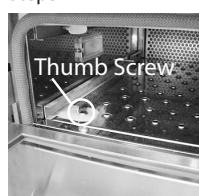

 Step 4 (Fig A)

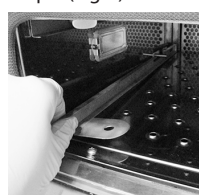

 Step 4 (Fig B)

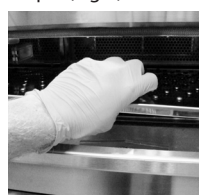

Step 4 (Fig C)



Step 5

### Step 1: Prepare the Oven

⚠ **WARNING:** The oven operates at temperatures up to 550°F (285°C) and may cause injury if not allowed to cool properly.

- Turn the oven off by touching the Off icon.
- Open the oven doors.

⊘ **DO NOT** attempt to clean the oven until the oven display no longer reads COOLING DOWN.

**NOTE:** To expedite cooking, leave the oven door open and insert a tray of ice into the cavity.

### Step 2: Remove and Clean the Wire Rack

⚠ **WARNING:** Be sure the oven interior is cool before you remove the rack.

- Remove the wire rack.
- Wash, rinse, and sanitize the wire rack.

### Step 3: Remove and Clean the Grease Filter

- Remove the grease filter from the oven. To remove, lift the grease filter by the handle and pull forward.
- Wash and gently rinse the grease filter with hot water.

⚠ **WARNING:** DO NOT scrub the grease filter or use a water jet when cleaning.

### Step 4: Remove and Clean the Bottom Jetplate

- Remove the left and right support rails by pulling up on the thumb screws and unscrewing them until there is enough clearance to remove the rail (Fig A), and then gently pulling the rails out and away from the oven (Fig B).
- Remove the bottom jetplate (Fig C).
- Wash, rinse and sanitize the bottom jetplate.

### Step 5: Clean the Cook Chamber

- Use a food vacuum or damp towel to remove food particles from the cook chamber.
- Spray Oven Cleaner onto the top, bottom, and sides of the cook chamber.

⚠ **CAUTION:** DO NOT spray Oven Cleaner into the holes on the back oven wall or directly into the cook chamber lamps. Doing so can damage critical oven components, resulting in a non-warranty service call.

- For stubborn stains, spray Oven Cleaner and allow it to penetrate for 5 minutes.
- Clean the cook chamber with a nylon scrub pad.
- Wipe the cook chamber with a clean, damp towel and then a dry towel.

## Supplies and Equipment

TurboChef® Oven Cleaner (Product Number: 103180), TurboChef® Oven Guard (Product Number: 103181), nylon scrub pad, cleaning towel, disposable gloves, protective eyewear, dust mask (optional)



 
Step 6 (Fig A)



Step 6 (Fig B)



Step 7

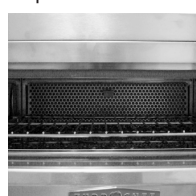

Step 8



Step 9



Step 10

### Step 6: Clean the Oven Doors

- Clean the metal portion of the oven door with Oven Cleaner and a nylon scrub pad.
  - Gently clean the glass window with Oven Cleaner and a cleaning towel.
- ⚠ **CAUTION:** DO NOT use abrasive cleaning supplies (e.g. steel wool) when cleaning the glass window. Doing so may scratch the window.
- ⚠ **CAUTION:** DO NOT apply excessive force when cleaning the glass window. Breakage may result in a non-warranty service call.
- Wipe the oven door and window with a clean, damp towel and then a dry towel.
- ⚠ **CAUTION:** DO NOT scrub or attempt to clean the oven door gasket (Fig B).

### Step 7: Apply Oven Guard

- Spray Oven Guard onto a clean towel.
  - Wipe the interior walls and the inside of the oven door.
- ⚠ **CAUTION:** DO NOT spray Oven Guard into the holes on the back oven wall or directly into the cook chamber lamps. Doing so can damage critical oven components, resulting in a non-warranty service call.

### Step 8: Reinstall Components

- Reinstall the bottom jetplate, left and right support rails, grease filter, and wire rack.

**NOTE:** There are notches on the right and left sides of the wire rack which fit over the pins on the sides of the cook chamber. The wire rack must be installed correctly to ensure proper oven operation.

### Step 9: Clean the Air Filter

- ⚠ **CAUTION:** TurboChef does not recognize blocked air vents as a warrantable claim. The filter must be cleaned regularly or replaced if damaged. During oven operation, the filter must remain in place at all times.
- Remove the air filter from the back of the oven.
  - Rinse the air filter with hot water. DO NOT scrub the filter.
  - Allow the air filter to dry completely.
  - Reinstall the air filter.
- ⚠ **CAUTION:** DO NOT Operate the oven without the filter in place.

### Step 10: Clean the Oven Exterior

- Wipe the oven exterior with a clean, damp towel.
- ⚠ **CAUTION:** DO NOT spray chemicals into any openings, such as the louvers on the side or rear panels. Doing so can damage critical oven components, resulting in a non-warranty service call.
- Wipe the oven exterior with a clean, dry towel.